
INSTALLATION AND OPERATION MANUAL


MA-60/120/240/350/500/650/800/1000/1200



Caution: Please read this manual carefully before operating
Damage caused by misuse is not covered by the warranty




FRONT PANEL

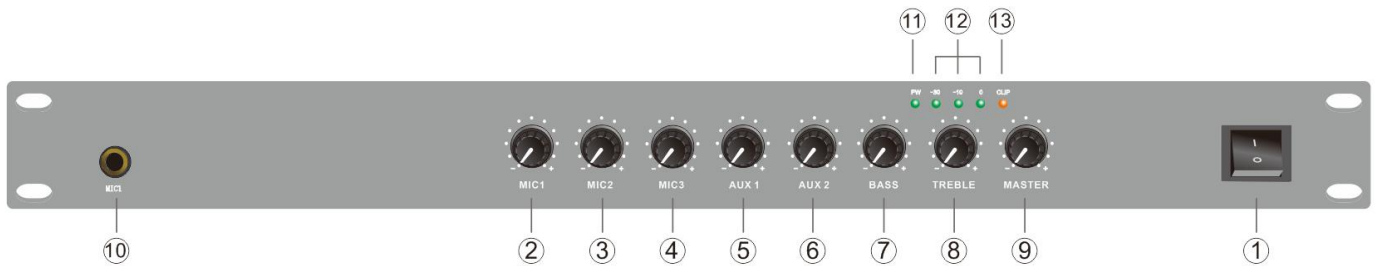

- | | |
|-----------------|---------------------------|
| 1. Power Switch | 8. Treble |
| 2. MIC1 volume | 9. Master volume |
| 3. MIC2 volume | 10. Mic1 in / 6.35mm jack |
| 4. MIC3 volume | 11. Power led |
| 5. AUX1 volume | 12. Level led |
| 6. AUX2 volume | 13. Clap led |
| 7. Bass | |

REAR PANEL

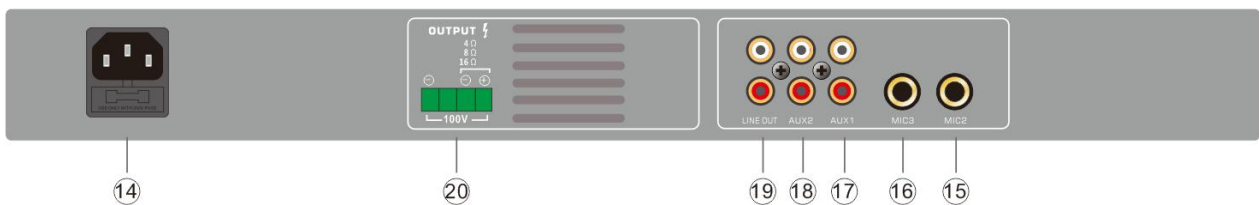

14. AC Power Socket
15. Mic2 in / 6.35mm jack
16. Mic3 in / 6.35mm jack
17. Aux1 in / RCA
18. Aux2 in / RCA
19. line out
20. Speaker out

SPECIFICATION SHEET

Model	MA- 60	120	240	350	500	650	800	1000	1200	1500	2000	2500	3000
Rated Power Output	60W	120W	240W	350W	500W	650W	800W	1000W	1200W	1500W	2000W	2500W	3000W
Speaker Output	100V and 4-16 Ohms												
Input	Mic1-3: 15mV aux1-2: 250mV; RCA type												
THD	<0.1%												
Frequency Response	80-16KHz												
S/N Ratio	>70dB												
Protection	High temp, short circuit, clip & overload protection												
Power Supply	AC230V or AC110V, 50-60Hz												
Dimension	550(W)×500(D)×150(H)mm												
Weight	9kg								10KG				

SERVICE

Ensure the problem is not related to operator error, or system devices that are external to this unit. Information provided in the troubleshooting portion of this manual may help with this process. Once it is certain that the problem is related to the product contact your warranty provider as described in the warranty section of this manual.

WARRANTY

Warranty terms of global three years. While the term and warranty may vary by country and may not be the same for all products. Terms and conditions of warranty for a given product may be determined first by locating the appropriate country which the product was purchased in, then by locating the product type.